

What to do if...  
What to do if...



A tire punctures

P. 606 If you have a flat tire



The hybrid system does not start

P. 620 If the hybrid system will not start

P. 117 Immobilizer system

P. 627 If the vehicle 12-volt battery is discharged



The shift lever cannot be moved out

P. 622 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 630 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 623 If you lose your keys



The 12-volt battery runs out

P. 627 If the vehicle 12-volt battery is discharged



The doors cannot be locked

P. 62 Side doors

P. 65 Back door



The horn begins to sound

P. 119 Alarm



The vehicle is stuck in mud or sand

P. 635 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 576

If a warning light turns on or a warning buzzer sounds...



## nWarning lights



Brake system warning light

or



P. 576



Malfunction indicator lamp

or



P. 577



Brake system warning light

P. 577



Driver's seat belt reminder light

P. 578



"ABS" warning light

or



P. 577



Front passenger's seat belt reminder light

P. 578



Master warning light

P. 578



Low fuel level warning light

P. 578



Electric power steering system warning light

P. 577



SRS warning light

P. 577



Pre-collision system warning light

P. 577



Open door warning light

P. 578



Tire pressure warning light

P. 578



Charging system warning light

P. 576